 


**TM 05538C-23&P/2**

# **U.S. MARINE CORPS TECHNICAL MANUAL**

## **ORGANIZATIONAL AND INTERMEDIATE MAINTENANCE (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)**



**RIFLE, 5.56-MM, M16A2 W/E  
NSN 1005-01-128-9936**



|  |                |
|--|----------------|
| <b>INTRODUCTION</b>                                | <b>1-1</b>     |
| <b>ORGANIZATIONAL<br/>MAINTENANCE INSTRUCTIONS</b> | <b>2-1</b>     |
| <b>INTERMEDIATE<br/>MAINTENANCE INSTRUCTIONS</b>   | <b>3-1</b>     |
| <b>MAINTENANCE OF AUXILIARY<br/>EQUIPMENT</b>      | <b>4-1</b>     |
| <b>REFERENCES</b>                                  | <b>A-1</b>     |
| <b>MAINTENANCE ALLOCATION<br/>CHART</b>            | <b>B-1</b>     |
| <b>REPAIR PARTS AND<br/>SPECIAL TOOLS LIST</b>     | <b>C-1</b>     |
| <b>EXPENDABLE SUPPLIES AND<br/>MATERIALS LIST</b>  | <b>D-1</b>     |
| <b>ILLUSTRATED LIST OF<br/>MANUFACTURED ITEMS</b>  | <b>E-1</b>     |
| <b>TORQUE LIMITS</b>                               | <b>F-1</b>     |
| <b>ALPHABETICAL INDEX</b>                          | <b>INDEX-1</b> |

**OCTOBER 1984**